


AIRBOY®

nano4 - Settings

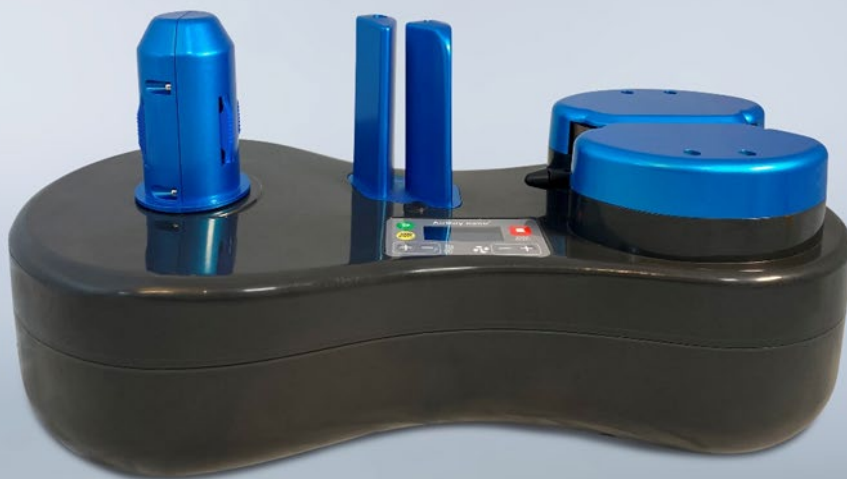

Recommended Settings for AirBoy nano4

Standard 20µm / ClimaFilm-50			
	Speed	Temperature %	Air %
9.7.1	V4	120-130	06-08
9.8.3	V4	120-130	32-34
AirWave Bio			
	Speed	Temperature %	Air %
9.7.1	V4	80-90	03-05
9.8.3	V4	80-90	20-22
AirWave PaperWave Bio			
	Speed	Temperature %	Air %
9.7.1	V4	120-130	08-10
9.8.3	V4	120-130	30-32
AirWave Clima-100			
	Speed	Temperature %	Air %
9.7.1	V4	95-100	04-06
9.8.3	V4	95-100	25-30

from Serial-No. > N4 120250XXX please use the following:

Standard 20µm / ClimaFilm-50			
	Speed	Temperature %	Air %
9.7.1	V4	65-75	13-15
9.8.3	V4	65-70	75-80
AirWave Bio			
	Speed	Temperature %	Air %
9.7.1	V4	35-38	13-15
9.8.3	V4	35-38	70-75
AirWave PaperWave Bio			
	Speed	Temperature %	Air %
9.7.1	V4	75-80	25-30
9.8.3	V4	75-80	80-90

AirWave ClimaFilm-100			
	Speed	Temperature %	Air %
9.7.1	V4	35-40	10-15
9.8.3	V4	35-40	55-60

The listed settings are recommendations to ensure a longer life of the machine by still good cushion results. Do not exceed these settings. But temperature and air volume can differ a little bit depending on field of application and environmental conditions.